

LMSA101496 DIGITAL REMOTE CONTROL FOR THE 180t / 190t ALCATEL LEAK DETECTORS

DESCRIPTION AND FUNCTIONS

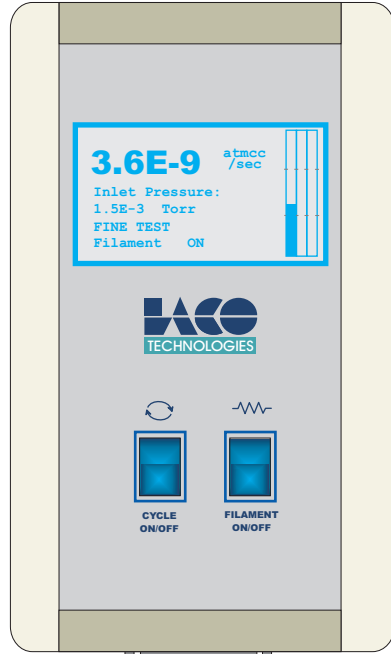


FIG. 1

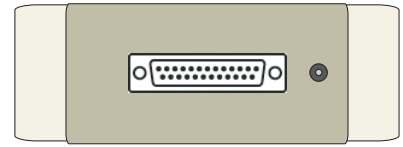


FIG. 2

INSTALLATION AND OPERATING INSTRUCTIONS

1. Connect one end of the 25-pin D-sub connector cable (included) in the LMSA101496 and the other end in the back of leak detector.
- 2.- Insert the pedestal mounting tube in the leak detector (included). See fig.3. It might be necessary to tighten the mounting tube compression nut inside the detector enclosure if the tube is too loose.
- 3.- Place the LMSA101496 on the pedestal (included). The LMSA101496 has a magnetic backing to attach to the pedestal or any other steel surface.
- 4.- Power up the leak detector.
- 5.- Adjust the display contrast by turning the Contrast Adjustment pot (See fig.2) CW or CCW until the desired contrast is obtained.
- 6.- The unit is ready to use.

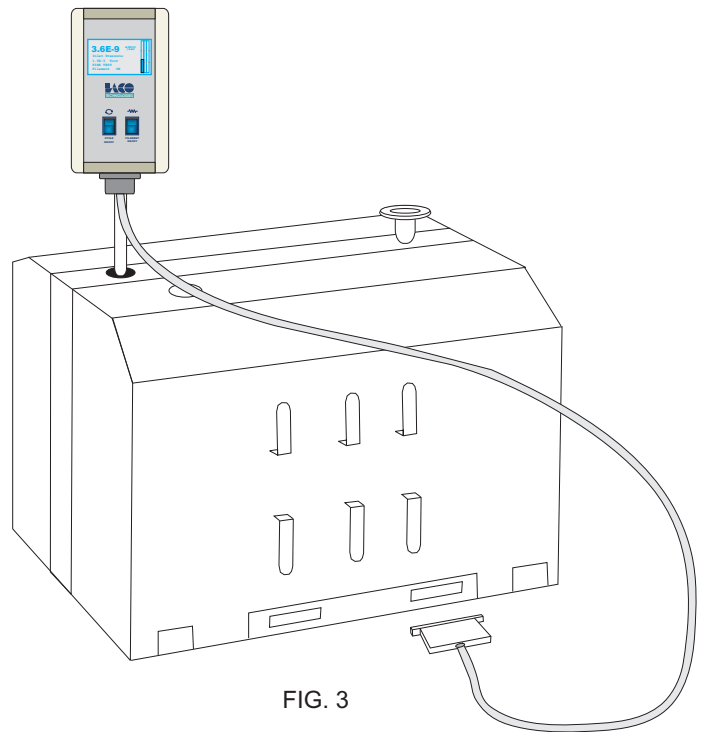


FIG. 3

For service or technical support please contact LACO Technologies, Inc. at (801) 486-1004 or e-mail: info@lacotech.com

LACO TECHNOLOGIES, INC.
139 WEST 2260 SOUTH
SALT LAKE CITY, UT 84115



PHONE: 801.486.1004
FAX: 801.486.1007
E-MAIL: INFO@LACOTECH.COM